

File Courtesy of GRWiki.org

GENERAL RADIO < 2

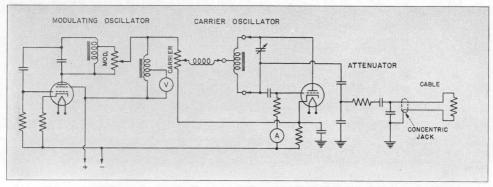


FIGURE 2. Schematic circuit diagram of TYPE 804-B U-H-F Signal Generator. The a-c power supply is not shown.

combine a wide frequency range with the ability to be set easily and accurately. The frequency range of the TYPE 804-B U-H-F Signal Generator extends from 7.5 to 330 megacycles in five overlapping ranges. The five corresponding scales on the main frequency dial are direct reading. The desired range is selected at will by an ingenious coil-switching mechanism, which brings the proper coil into position immediately above the variable tuning condenser and associated 955type oscillator tube. The range selector is designed to bring the proper directreading frequency scale into view through the window in the protective dial housing. The scales not being used are masked, thus doing away with the confusion of multiple scales simultaneously in view. Each frequency range is carefully aligned with the direct-reading frequency scale so that the frequency can be set to well within 2% of the desired value.

The five coils for the five overlapping frequency ranges are fastened to a mycalex disc, which is rotated by the range selector. Mycalex is used because it has very low loss at radio frequencies. At each coil position, silver contacts on the disc engage silver brushes on the condenser frame, as the particular coil is moved into operating position. Lead length between the coil and the condenser is a minimum. A sixth position is provided on the range switch with a blank plug-in form, which can be wound by the user to cover frequency bands in or below the normal range of the signal generator, or to provide band spread over a limited frequency range.

Over each range, the frequency is controlled by a worm-driven variable air condenser. The vernier dial has 100 divisions and requires 15 turns to cover each frequency range. The tuning condenser therefore has 1500 scale divisions for each range, making possible a precision of setting to better than 0.1%. The carrier oscillator uses a Hartley circuit in conventional arrangement.

Radio-frequency leakage in the TYPE 804-B U-H-F Signal Generator has been reduced to a minimum and is not noticeable with receivers that are now available. The design of the new instrument is such that there are no openings or windows in the panel or cabinet to allow a small amount of radio frequency field to "spray" out. Complete shielding of the two cases of the panel voltmeters has effectively prevented leakage through the meters. Direct-reading, protected frequency

³ EXPERIMENTER


scales have been obtained without allowing appreciable leakage to occur.

The output voltage is continuously variable from 1 microvolt to 20 millivolts up to 100 megacycles. Above this frequency, the maximum output is somewhat less than 20 millivolts. The attenuator dial is calibrated in microvolts and millivolts, and is direct reading when the oscillator amplitude is adjusted to a standard value as indicated by the carrier-level grid-current meter. The attenuator dial controls a capacitive attenuator. A step-down gear reduction is provided for ease in adjusting to the desired output voltage. Adjusting screws, set at the factory, allow the output voltage to conform accurately to the dial calibration over the entire scale of the attenuator dial. The capacitance of the attenuator is variable between 0 and 15 $\mu\mu f$ in each of two sections, forming a capacitive voltage divider. Regardless of setting, the attenuator presents a constant capacitance to the oscillator circuit so that the

carrier frequency does not change with adjustment of the attenuator control.

The voltage from the attenuator is impressed across a 100 µµf condenser. The output voltage is obtained from this condenser through a series resistor of 75 ohms, and is made available at the concentric shielded jack at the right-hand side of the panel. A three-foot concentric shielded output lead, having a characteristic impedance of 75 ohms and fitting the shielded jack, is furnished with the signal generator. The calibration of the attenuator dial is the actual open-circuit voltage at the output jack. Above 30 megacycles the voltage at the far end of the output cable is very nearly equal to that at the output jack. Below 30 megacycles a correction factor for the voltage at the far end of the cable must be applied. A plot of this correction is included in the instruction book. Above 30 megacycles a 10:1 shielded attenuator can be used with the output cable to

FIGURE 3. Two views of the frequency-control drive mechanism partially disassembled. In the left-hand view are shown the gears through which the direct-reading frequency dial is driven from the worm shaft of the condenser. The dial attaches directly to the large gear. At the right, the dial and mask are shown assembled. The bakelite shaft concentric with the large gear drives both the coil switch and the mask for the frequency scales.

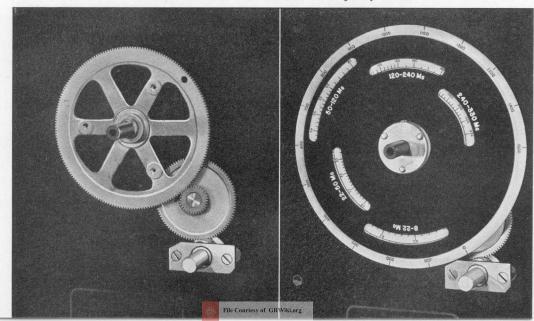

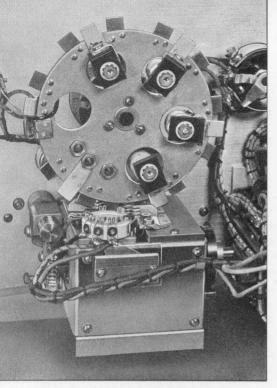


FIGURE 4. Rear view of the coil switching mechanism. A positive wiping contact between silver-plated surfaces is obtained. Leads are made short and direct in order to keep residual inductance and capacitance low.

reduce the indicated output voltage by a factor of ten.

The TYPE 804-B U-H-F Signal Generator will furnish either an amplitudemodulated or an unmodulated output signal. The type of modulation desired is controlled by a three-position panel switch; one position for an unmodulated signal, the second for a 400-cycle modulated signal from an internal oscillator, and the third for modulation from an external source. The modulation is adjustable up to 60%. The percentagemodulation indicator on the panel measures the a-c modulating voltage which is inserted in series with the d-c plate supply of the oscillator tube. As the latter voltage is maintained constant by voltage regulation, the indicating meter can be calibrated directly in percentage modulation, since the modulating voltage is proportional to the percentage of modulation.

When it is desired to employ external modulation, the internal modulation oscillator tube is used as an amplifier. The input impedance for external modulation is 0.25 megohm. Approximately seven volts across the input terminals are required for 50% modulation. The modulation characteristic is flat within ± 2 db from 100 to 20,000 cycles per second.

The TYPE 804-B U-H-F Signal Generator operates from the a-c line, 105 to 125 volts, 42 to 60 cycles. A voltage regulator circuit eliminates difficulties due to fluctuating line voltage. Provision is made for altering the connections to the primary of the power transformer so that the instrument can be used on 210 to 250 volt lines. Adequate radiofrequency filtering is provided in the power supply to prevent leakage back into the power line.

- Myron T. Smith

SPECIFICATIONS

Carrier Frequency Range: 7.5-330 Mc in five ranges — 7.5-22, 22-50, 50-120, 120-240, 240-330 Mc.

Frequency Calibration: Direct reading within 2%.

Output Voltage Range: 1 microvolt to 20 millivolts for 7.5-100 Mc; 1 microvolt to 10 millivolts for 100-330 Mc.

Output System: Output is obtained across a 75Ω cable.

Modulation: The generator is amplitude

modulated. Continuously adjustable 0-60%. Internal: 400 cycles $\pm 5\%$. External: Flat within 2 db from 100 to 20,000 cycles. Seven volts are required for 50% modulation. The input impedance is 0.25 megohm. Frequency modulation is present, particularly at the higher frequencies. For testing selective receivers, therefore, it is recommended that the generator be used unmodulated.

Stray Fields: Stray fields will not be noticeable with receivers of poorer sensitivity than 1 microvolt.

Tubes: 955, 6G6G, 6X5G, VR150. Accessories Supplied: Three-foot output cable, 75-ohm impedance. Six-foot cable for a-c line connection. One blank coil form for addi- tional frequency range. One terminal unit 774-YA-1. One external attenuator 774-X-1.		Mounting: Black crackle aluminum panel, walnut cabinet, hinged cover. Dimensions: (Length) 19½ x (depth) 9 x (height) 115% inches. Net Weight: 32 pounds.		
Туре			Code Word	Price
804-B			DENSE	\$350.00

TYPE 804-B U-H-F Signal Generator is not in stock at present, and nearly all units now in production have already been reserved for customers. After the few remaining units are sold, deliveries cannot be made before next June.

5 > E X P E R I M E N T E R

BROADCAST FREQUENCY REALLOCATION

• BROADCAST ENGINEERS are urged to place their orders *now* for new frequency monitor crystals required by the frequency reallocation plan effective March 29.

The TYPE 376-L Quartz Plate is recommended for use in all approved G R monitors. The special price effective until March 29 is \$65.00. Send \$35.00 with your order, which will be shipped COD for the balance unless credit has been established. If cash for the full amount is sent in advance, we prepay postage.

SERVICE DEPARTMENT NOTES RETURNING INSTRUMENTS FOR REPAIR

• WHEN GENERAL RADIO instruments are returned to the Service Department for repair or reconditioning, the time consumed in handling the job can be held to a minimum if the procedure outlined here is followed.

Before returning an instrument to our factory for any reason whatever, a letter giving *complete* information about its operation should be sent to the Service Department. It is essential that both the type and serial numbers be given so that our records may be checked and the history noted. In many instances, if the instrument is not operating properly, it is possible to diagnose the trouble from the information supplied, and to correct it by furnishing a new part such as a tube, resistor, inductor, or capacitor.

If it is necessary that the instrument

be returned to the factory, the Service Department will so advise the owner and will furnish complete shipping instructions.

When an instrument is to be returned for reconditioning and recalibration, which may require a week to ten days to complete, it is sometimes possible to speed the work if a letter is written requesting us to proceed at once upon receipt of the instrument and a confirming purchase order is then sent within a few days. This procedure should be followed only in an emergency, as it is easier for all concerned when packing and shipping instructions are supplied by the Service Department. Because of possible damage from excessive handling in transit, we do not recommend shipment via freight or overland trucking, but