OPERATING INSTRUCTIONS

for

TYPE 1304-A BEAT-FREQUENCY OSCILLATOR

FORM 670-C



GENERAL RADIO COMPANY

CAMBRIDGE 39


NEW YORK


CHICAGO LOS ANGELES

MASSACHUSETTS

U. S. A.





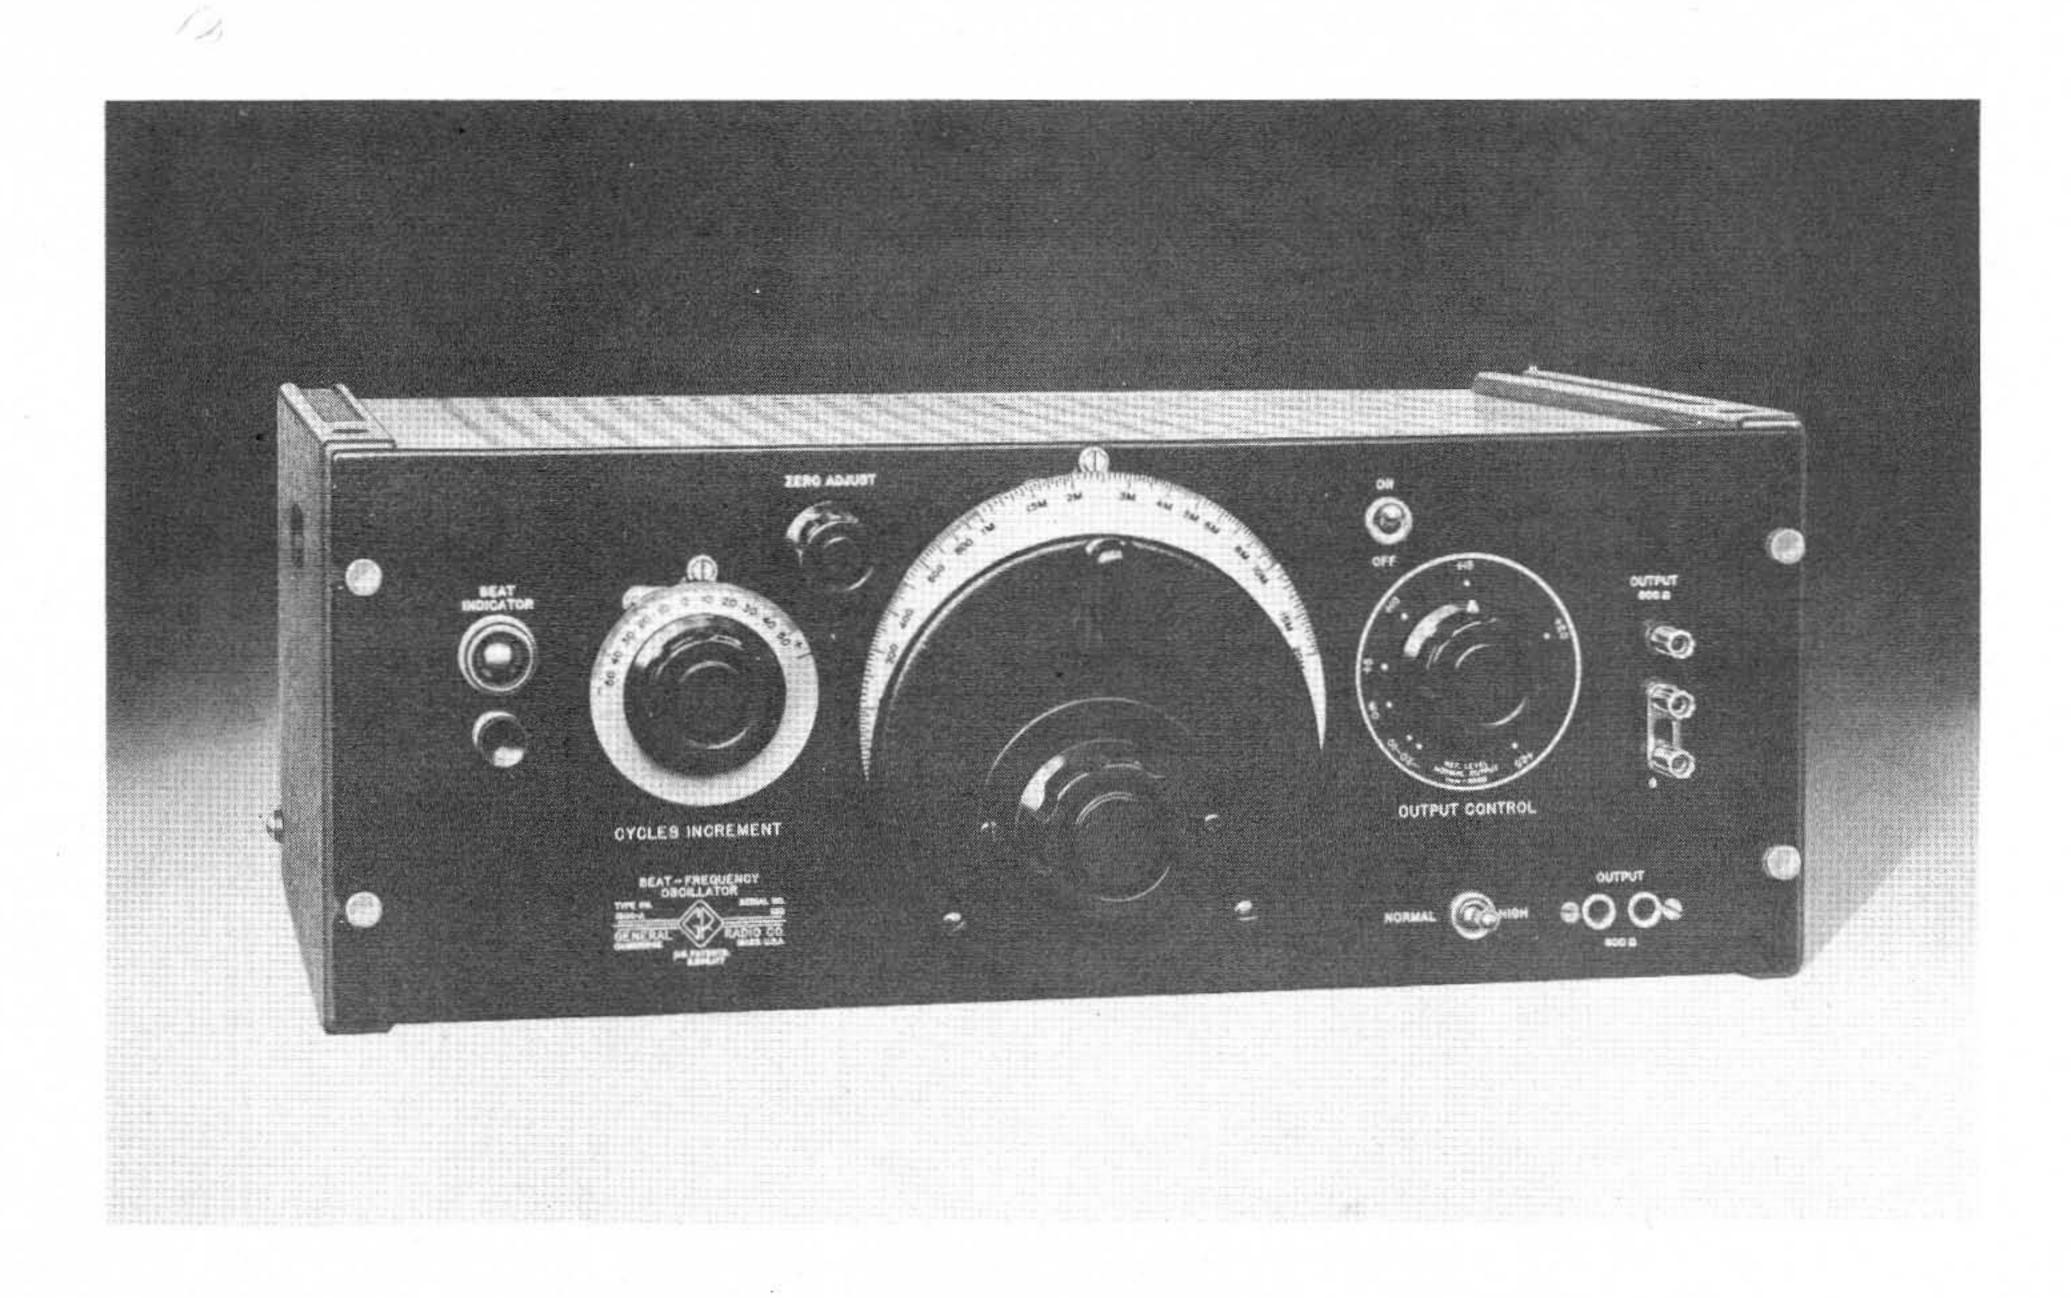

Panel View of Type 1304-A Beat-Frequency Oscillator.



File Courtesy of GRWiki.org

OPERATING INSTRUCTIONS for TYPE 1304-A

BEAT-FREQUENCY OSCILLATOR

The Type 1304-A Beat-Frequency Oscillator is a power source for audio-frequency measurements. It delivers 0.3 watt at frequencies between 20 and 20,000 cycles, with a harmonic distortion of 0.5% or less, and a maximum output of one watt can be obtained at some sacrifice in purity of waveform. The gear-driven dial carries a logarithmic scale and can be readily coupled to an automatic analyzer or recorder. An increment dial is provided for producing small changes in frequency.

1.0 OPERATION

1.1 <u>Mounting</u>: The oscillator is equipped with walnut end frames for table mounting. These can be removed and the instrument mounted in a 19-inch relay rack, if desired.

1.2 Power Supply: Connect the oscillator to the power line by means of the cord-and-plug assembly provided. Be sure that the line voltage and frequency agree with those specified on the metal plate at the power input socket. Instruments are normally supplied for 115-volt operation. Power-transformer connections can be changed as indicated in the wiring diagram to convert the instrument to 230-volt operation. When connections are changed, the metal plate should be reversed to read 230 volts. When so ordered, instruments can be supplied with the transformer connected for 230 - volt operation.

Throw the power switch to ON.

1.3 <u>Ground</u>: Connect the G terminal (on the panel) to an external ground in order to avoid hum.

1.4 Frequency Calibration: The frequency calibration can be standardized at either the power-line frequency or at zero. Where the power line is frequency-controlled, standardization at the line frequency is recommended.

When maximum accuracy of calibration is desired, it is advisable to check the standardization occasionally during the first few minutes of operation and to readjust if necessary. The drift is less than 7 cycles in the first hour of operation and is substantially complete after 2 hours.

1.41 Line-Frequency Standardization: Set main dial at the line frequency and CYCLES INCREMENT dial at zero. Turn ZERO ADJUSTMENT dial until the beat between the oscillator and power line frequencies is one



TYPE 1304-A

cycle in several seconds, as indicated by alternate glowing and extinguishing of the BEAT IND neon lamp. Make this adjustment carefully to get the beat as slow as possible.

1.42 Zero-Beat Standardization: Set main dial and CYCLES INCRE-MENT dial to zero. Adjust ZERO ADJUSTMENT dial until BEAT IND lamp goes out. This adjustment is sharp and must be made carefully.

1.5 Frequency Controls: After the calibration has been standardized, the output frequency is indicated by the setting of the frequency dials. The main frequency scale is logarithmic, and hence the dial can be set with the same fractional accuracy at any point.

The CYCLES INCREMENT dial permits small variations in frequency to be obtained above and below the frequency of the main dial setting. Its calibration adds algebraically to the reading of the main dial.

1.6 Output Switch: For best waveform, the instrument should be operated with the output switch set to the NORMAL position. This provides a maximum output of approximately 0.3 watt with less than 0.25% distortion over most of the audio-frequency range. When the switch is in the NORMAL position, the OUTPUT CONTROL is calibrated to read directly in terms of decibels power level into a matched resistive 600-ohm load.

Where more output is required at some sacrifice in purity of waveform, the output switch should be thrown to the HIGH position. This provides a maximum output of approximately 1 watt with some increase in distortion. (See Specifications.) The calibration of the OUTPUT CONTROL does not apply when the switch is in the HIGH position.

1.7 Load: The oscillator is designed to operate into a load impedance of 600 ohms, but it can be operated into an open circuit with no appreciable increase in distortion. With the OUTPUT CONTROL turned fully on, the harmonic content is approximately doubled when the oscillator is operated into an extremely low impedance. If the OUTPUT CONTROL is turned 3 db or more below the maximum setting, the load impedance has no effect on the waveform. Multipoint socket is also provided at the rear.

When the ground strap is disconnected from the lower output terminal, the output circuit is sufficiently well balanced for operation into most audiofrequency equipment.

When a plug is inserted in the Western Electric-type output jack on the panel all other output terminals are disconnected. The load may be balanced, but if one side is grounded, it should connect to the right side of the jack.

2.0 CIRCUIT DETAILS

2.1 General: The elementary schematic diagram of Figure 1 shows the elements of the oscillator which are: (1) a fixed oscillator operating at a frequency in the vicinity of 190 kc, (2) a second oscillator variable from 170 to 190 kc, (3) a mixer in which the difference frequency is produced, (4) a



2

GENERAL RADIO COMPANY

low-pass filter for removing mixer components above the audio-frequency range, (5) an audio-frequency amplifier, (6) an output transformer, and (7) an attenuator.

The complete wiring diagram, Figure 1, shows the circuits in detail, including the power supply.

2.2 Oscillators: The oscillator tuned circuits use universal-wound coils on ceramic forms in order to achieve maximum mechanical stability.

The oscillator tubes are 6SL7 twin triodes, with the plate of the oscillator section grounded and the other section used as a cathode-coupled isolating amplifier. With grounded-plate operation, no tube shields are necessary to prevent capacitive coupling.

2.3 Mixer: The mixer tube is a 6SA7, operated with independent bias

adjustments on the cathode and grid #3. This bias arrangement permits independent adjustment of output voltage and harmonic content.

2.4 Audio Amplifier: The low-pass filter is followed by a 6SL7-GT twin triode, the first section of which is operated as an amplifier and the second as a phase inverter. The output stage is a push-pull arrangement of 6V6-GT's.

2.5 Output System: The output circuit consists of the output transformer and volume control. A voltage from the tertiary winding of the output transformer is fed back to the cathode of the first audio amplifier tube to produce degeneration. The switch, S3, selects either of two values of this voltage, one corresponding to NORMAL output, the other to HIGH.

3.0 MAINTENANCE

Replacement of V-3, V-5, or V-6 may necessitate a few minor adjustments to restore the output level and to reduce the harmonic distortion introduced by variations in tube characteristics. When V-1 or V-2 is replaced, readjustments may be necessary before the oscillator can be set to zero frequency.

3.1 Adjustment for V-3: A wave analyzer with a high input impedance (one megohm) should be connected across the input to V-4 (terminal No. 4 and ground). These adjustments should be made at 1 kc. A slight readjustment of R-16 may be all that is necessary to reduce the second harmonic to a minimum. However, alternate adjustment of R-17 for 2.5 volts input to V-4 and of R-16 for minimum second harmonic will restore normal operation. R-16 and R-17 are screw-driver adjustments under the cap nuts just behind V-2, R-17 being the one nearer the main tuning capacitor.

3.2 Adjustment for V-5 and V-6: These adjustments should be made with a 600-ohm resistive load and a wave analyzer or distortion meter connected to the output terminals. R-32 should be adjusted for minimum second harmonic at a frequency of 100 cycles. Adjustment of R-38 will restore the maximum output voltage to 13.75 volts on the NORMAL output position and of R-39 to 24.5 volts on the HIGH output position. R-32 is located between V-5 and V-6; R-38 and R-39 are directly in front of the output transformer, R-39 being to the right.



3

TYPE 1304-A

3.3 Zero Frequency: If the oscillator cannot be set to zero-beat, adjust C-2, located just to the left of the ZERO ADJUSTMENT. Use the BEAT INDICATOR to determine when proper adjustment has been made.

4.0 SPECIFICATIONS

Frequency Range: 20 to 20,000 cycles.

Frequency Controls: The main control is engraved from 20 to 20,000 cycles per second and has a true logarithmic frequency scale. The total scale length is approximately 12 inches. The effective angle of rotation is 240° , or 80° per decade of frequency. The frequency-increment dial is calibrated from +50 to -50 cycles.

Frequency Calibration: The calibration can be standardized within 1 cycle at any time by setting the instrument to the line frequency or to zero beat. The calibration of the frequency control dial can be relied upon within +(1% + 0.5 cycle) after the oscillator has been correctly set to zero beat. The accuracy of calibration of the frequency-increment dial is +1 cycle.

Zero-Beat Indicator: A neon lamp is used to indicate zero beat at the line frequency or at zero scale.

Frequency Stability: The drift from a cold start is less than 7 cycles in the first hour and is essentially completed within two hours.

Output Impedance: The output impedance is 600 ohms, either grounded or balanced-to-ground, and is essentially constant regardless of the output control setting. With load impedances of 2000 ohms or less, the output is balanced for all settings of the output control. With higher load impedances, unbalance may occur at low settings of the output control.

Output Voltage: Approximately 25 volts open circuit. For a matched resistive load the output voltage varies by less than ± 0.25 db between 20 and 20,000 cycles. The open-circuit output voltage is approximately 40 volts with the output switch in the HIGH position.

Output Control: The output control is calibrated from +25 to -20 db, referred to 1 milliwatt into 600 ohms.

Output Power and Waveform: NORMAL output 0.3 watt maximum when operated into matched load, with total harmonic content approximately 0.25% between 100 and 7500 cycles. Below 100 cycles the harmonic content increases, and may reach 0.5% at 50 cycles. A panel switch allows an increase in the output power to a maximum of 1 watt. For this HIGH position of the OUTPUT switch the distortion is less than 1% between 100 and 7500 cycles and increases to 2% at 50 cycles. With the OUTPUT control turned fully on, the harmonic content is approximately doubled when the oscillator is operated into a very low impedance. With the OUTPUT control turned 3 db or more below maximum load, impedance has very little effect upon the waveform.

A-C Hum: For NORMAL output the a-c hum is less than 0.1% of the output volts.



GENERAL RADIO COMPANY

Terminals: Jack-top binding posts with standard 3/4-inch spacing and standard Western Electric double output jack are provided on the panel. A standard multipoint socket and plug provide duplicate output terminals on the back of the instrument for relay-rack installation.

Mounting: 19-inch relay rack panel; removable wooden ends are supplied so that it may be used equally well on a table.

Power Supply: 105 to 125 volts, 50 to 60 cycles a-c. A simple change in the connections to the power transformer allows the instrument to be used on 210 to 250 volts. The total consumption is about 100 watts.

Tubes:	3 - 6SL7-GT	2 - 6V6-GT
	1 - 6SA7	2 - 0D3/VT150
	1 - 5V4 - G	1 - 991

All are supplied with the instrument.

Accessories Supplied: A seven-foot line connector cord and a multipoint connector.

Dimensions: $19-3/8 \ge 14-1/4 \ge 7-1/2$ inches, over-all.

Net Weight: 41-1/2 pounds.



 (θ)



RESISTORS

52.


CAPACITORS

29


	24					
		TYPE	A. 1 =			TYPE
R-1 = 1.8 Megohm R-2 =	±10% IRC	8T-1/2	C-1 = C-2 =			368-413
R-2 = 68 K Ohms	±10% IRC	8T-1/2	C-3 =		ALC ACDAVAY	COA-5
R-4 = IKOhm	±10% IRC	BT-1/2	C-4 =	0.0001525 µt	±1% AEROVOX ±10% CD	1464 5W
R=5 = 27 KOhms	±10% IRC	BT-1/2	C-5 =		±10%	COL-44
R-6 = 1.8 Megohm	±10% IRC	BT-1/2	C-6 =	Contraction and a state of the state of t	1 V/	COT-17
R=7 =			C-7 =	0.00015 uf	±10% CD	5W
R+8 = 68 K Ohms	±10% IRC	8T-1/2	C-8 =	0.0005 µf	±10% CD	5W
R-9 = IKOhm	±10% IRC	BT-1/2	C-9 =	415 muf	GR	539-410-4
R-10 = 27 K Ohms	±10% IRC	BT-1/2	C - 10 = 0	있는, 중한감각 - 11 2 ⁻¹⁴ 2017년(J		COA-5
R-II = 15 K Ohms	±10% IRC	8T-1/2	C - 11 =	14 - 27 T R 25 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2	±1% AERGYOX	
R-12 = 15 K Ohms	±10% IRC	8T-1/2	C - 12 =	2003 mm 20 m	±10% CD	5W
R-13 = 16 K Ohms	±5% 1RC	BT-1/2	C-13 =	7 μμf		COT-17
R-14 = 150 K Ohms	±10% IRC	8T-1/2	C - 14 =	0.00005 µf	±10% CD	5W
R-15 = 150 K Ohms	±10% IRC	BT-1/2	C-15 =		±10% CD	5W
R-16 = 10 KOhms		POSC-II	C - 16 =	0.5 µf		COL-44
R-17 = 10 KOhms		POSC-11	C - 17 =	0.00005 µf	±10% CD	5W
R-18 = 56 K Ohms	±10% IRC	8T-1/2	C-18 =	2월 - 3월 - 4월 - 3월 - 3월 - 2월		COEB-8
R-19 = 75 KOhms	±5% IRC	8T-1	C - 19 = 0	15 µf	+50%,-10%	
R-20 = 1.0 Megohm	±10% IRC	8T-1/2	C-20 =	0.000025 µf	±5% CD	5W
R-21 = 3300 Ohms	±10% IRC	BT-1/2	C-21 =		<u>29</u> 1	COA-2
R-22 = 100 K Ohms	±10% IRC	BT-1/2	C-22 =	공동이 ^{2017년} 전문이 있는 것은 것은 것은 것을 하는 것을 하는 것을 하는 것을 하는 것을 수 있다. 것을 수 있는 것을 하는 것을 수 있다. 것을 수 있는 것을 수 있는 것을 수 있는 것을 수 있는 것을 수 있다. 것을 수 있는 것을 수 있다. 것을 수 있는 것을 것이 없는 것을 수 있는 것을 수 있다. 것을 것을 것을 것을 것을 수 있는 것을 수 있는 것을 수 있는 것을 수 있는 것을 수 있다. 것을 것을 것 같이 것을 것을 것 같이 것을 것 같이 것을 것 같이 없다. 것을 것 같이 것 같이 것 같이 없다. 것 같이 것 같이 없다. 것 같이 것 같이 것 같이 없다. 것 같이 것 같이 있 않는 것 같이 없다. 것 같이 것 같이 것 같이 없다. 것 같이 것 같이 없다. 것 같이 없다. 것 같이 없다. 것 같이 없다. 것 같이 것 같이 없다. 것 같이 없다. 것 같이 없다. 것 같이 없다. 것 같이 것 같이 없다. 것 같이 없다. 것 같이 않는 것 같이 없다. 것 같이 않는 것 같이 없다. 것 같이 않는 것 같이 없다. 것 같이 없다. 것 같이 않는 것 같이 없다. 것 같이 없다. 것 같이 않는 것 같이 않다. 것 같이 않는 것 같이 않다. 것 같이 않는 것 같이 않는 것 같이 않다. 것 같이 않는 것 같이 않는 것 같이 않다. 것 같이 같이 없다. 것 같이 않은 것 같이 않다. 것 같이 것 같이 않는 것 같이 없다. 것 같이 없다. 것 같이 않다. 것 같이 않았다. 것 같이 것 같이 않았다. 것 같이 것 같이 않았다. 것 않았다. 않았다. 것 같이 않았다. 않았다. 것 같이 않았다. 않았다. 것 않았다. 것 않았다. 않았다. 않았다. 것 않았다. 않았다. 않았다. 않았다. 않았다. 것 않았다. 않았다. 않았다. 것 않았다. 않았다. 않았다. 않았다. 않았다. 않았다. 않았다. 않았다.	±5%	COL-57
R-23 = 1.0 Megohm	±10% IRC	BT-1/2 BT-1/2	C-23 =	[2] A. B. M.	±10% CD	5W
R-24 = 3900 Ohms	±5% IRC	BT-1/2 BT-1/2	C-24 =		±5%	COL-57
R-25 = 18 K Ohms	±5% IRC	BT-1/2 BT-1/2	C-25 =	0.25 µf	±20%	COL-56
R-26 = 22 K Ohms	±5% IRC ±10% IRC	8T-1/2 8T-1/2	C-26 =	0.25 µf	±20%	COL-56
R-27 = 560 K Ohms		81-1/2 BT-1/2	C - 27 = 0.00 = 0.00	0.005 µf	±5% CD	LW LW
R-28 = 560 K Ohms $R-29 = 10 K Ohms$		BT-1/2 BT-1/2	C - 28 =	0.005 uf	±5% CD	IW IW
R-29 = 10 K Ohms $R-20 = 10 K Ohms$		BT+1/2	C - 29 = 0	0.005 µf	±10% CD	i W
R-30 = 10 KOhms		REP0-1076	C - 30 =	40 µf	+50%,-10%	COEB-17
R = 31 = 165 Ohms	±5%	DACH CCO	(-3) = (-3) =	40 µf 5	201 12 12 12 12	
R = 32 = 100 Ohms	±10% IRC	BT-1/2	- C-82 =	40.μf	+50%,-10%	COE8-17
R=33 = 12 K Ohms	±10% IRC	AT IN	C-33 =	40 HF J		
$R_{-34} = 12 \text{ K Ohms}$	±10% IRC	8T-1/2	C-34 =			AAFA A
R-35 = 10 K Ohms	TIU 140		C-35 =	20 µf	+50%,-10%	COEB+9
R - 36 = 660 Obms	±10% 18C	BT-1/2	C-36 ≠ C-37 =	20 µf 20 µf	24	
R - 37 = 560 Ohms	TIVA INT	P05W-862	C-37 = C-38 =	0.01 µf	±10% CD	3L
R-38 = 300 Ohms R-39 = 300 Ohms		P05W-862	C-39 =	0.01 µf	±10% CD	31
	±5% IRC	8T-1/2	C-40 =	0.001 4	+105	COM-358
(ALC)		471-445	76.9	1000 · · · · · · · · · · · · · · · · · ·	54 C	846-402
R=41 = 0uter R=42 = 1inner		4/1-445	212 =	10	110%	CON- 288
R - 42 = 100 K Ohms	±10% IBC	BT-1/2		BIDITIONS AND CONTRACTORS		
$R_{-44} = 82 \text{ K Ohms}$	±10% IRC	BT-1/2	S-1 = 1	within aper sur-	SCOMPLEMENTS INFO	
$R_{-45} = 580 \text{ K Ohms}$	±10% IRC	BT-I	25.0 12	Switch DPST SWP-		이 방법에 알 가슴 같아?
R-46 = 450 Ohms	3033775374+357853 - 657 57		IN YOR DESCRIPTION OF THE PROPERTY OF	Switch DPDT SWT-	-335	
R-47 = 450 Ohms >		REP0-1090-27	Criterio per concerno		\$0+1= Soc	cket CDMS-140
R-48 = 450 Ohms			1920년 11월 1970년 11월 11월 11월 11월 11월 11월 11월 11월 11월 11	Transformer 365-	- 경험하면 2012년 11월 11월 21일 - 21일 - 21일 - 21일 - 21일	
R-49 = 1000 Ohms			1920년 11월 1970년 11월 11월 11월 11월 11월 11월 11월 11월 11월 11	Transformert 485-	-422+2 4-1 = 1=4	fuctor 913-32
R-50 = 1000 Ohms		REP0-1090-28	* <u>-</u> 3 2		3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Juctor 913-32
R-51 = 1000 Ohms		WEEKING HOUR INTERNET AND IN THE SECOND STREET	P-1 = F	영향, 경영화학원 영양가 영상		luctor 250 ml
R-52 = 1000 Ohms			PL-1= #	Aug CDPP	P-562A	119-30
R-63 = 120 Ohms	±10% IRC	BW-1/2				
$R_{-54} = 50 \text{ Ohms}$		POSW-862	F+1 = #	Wee 1.25 amp 3	Slow Blow SAG GR	t FYF+1 (111
R-35 = 100 K Ohms	±10% IRC	BT-1/2	F+2 = r	use 1.20 amp e	New Blew SAG OR	· · · · · · · · · · · · · · · · · · ·
R-56 =		20			New Blew SAG ER	
			F-2 = F	we 0.6 mp 7	Blow Blow SAG, GR	. ENE- 1



2.3

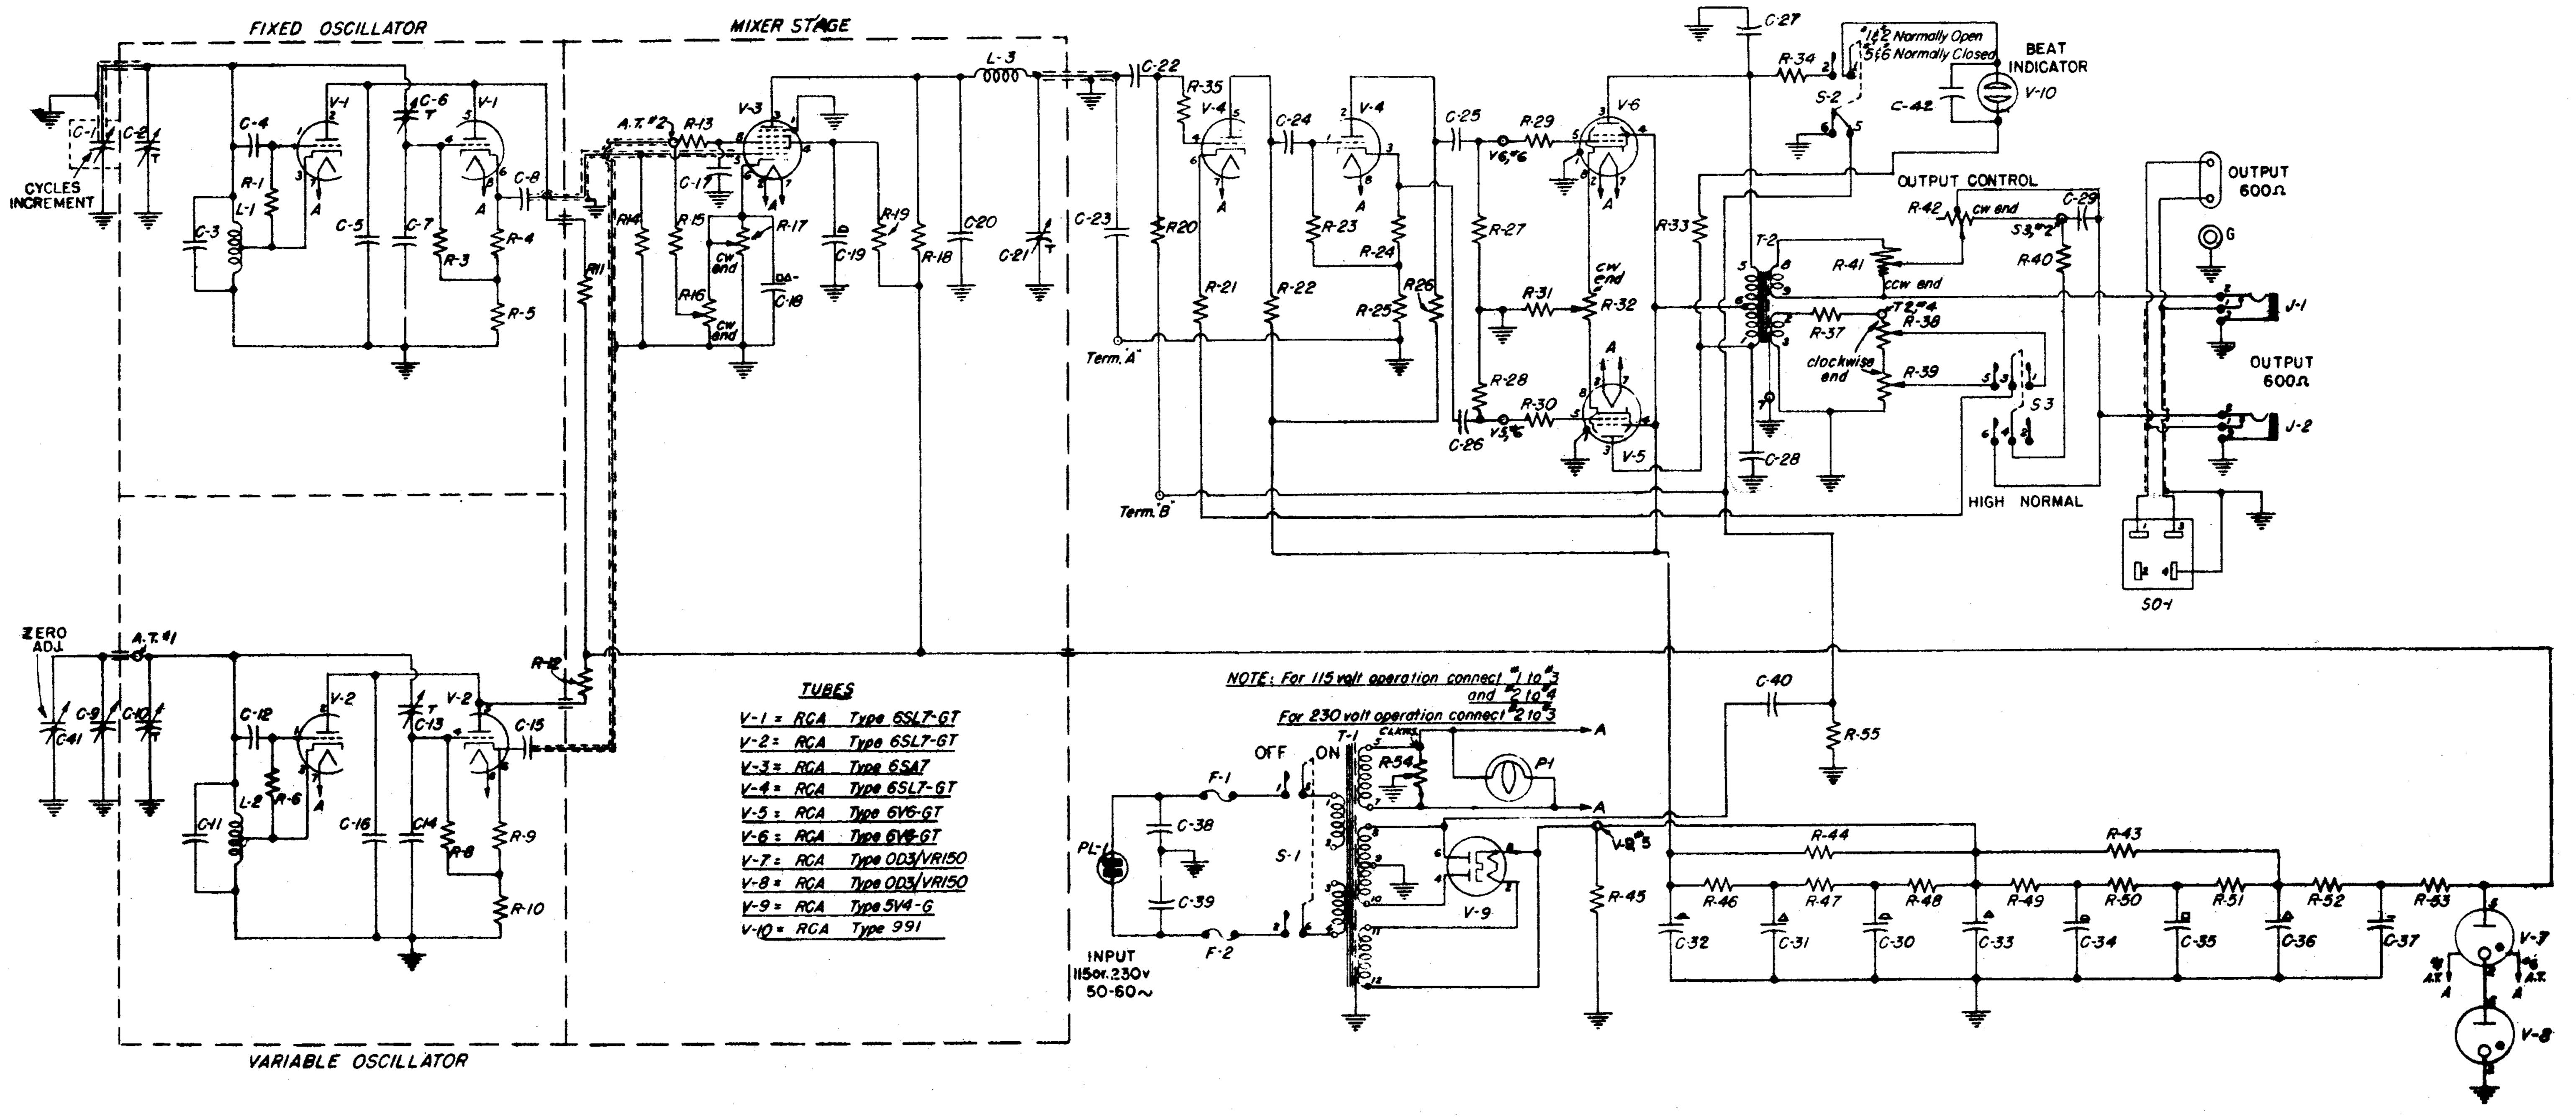

· .

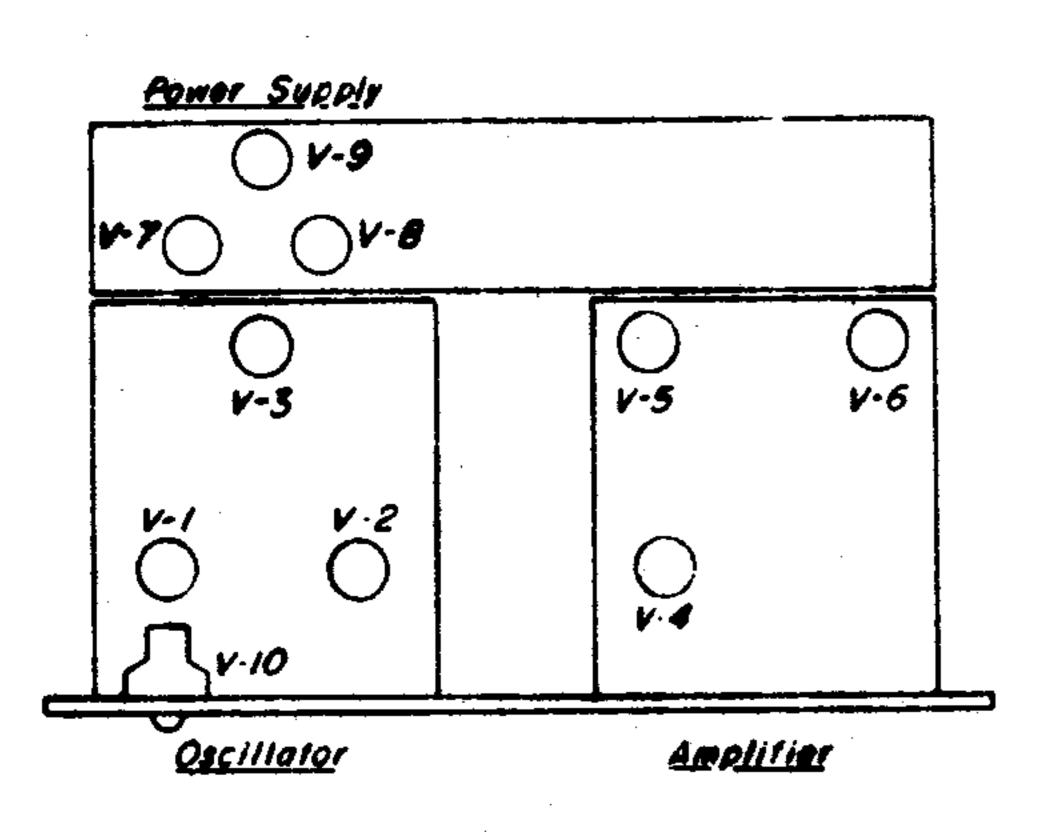

TUBE LOCATIONS

Figure 2. Wiring Diagram for Type 1304-A Beat-Frequency Oscillator.

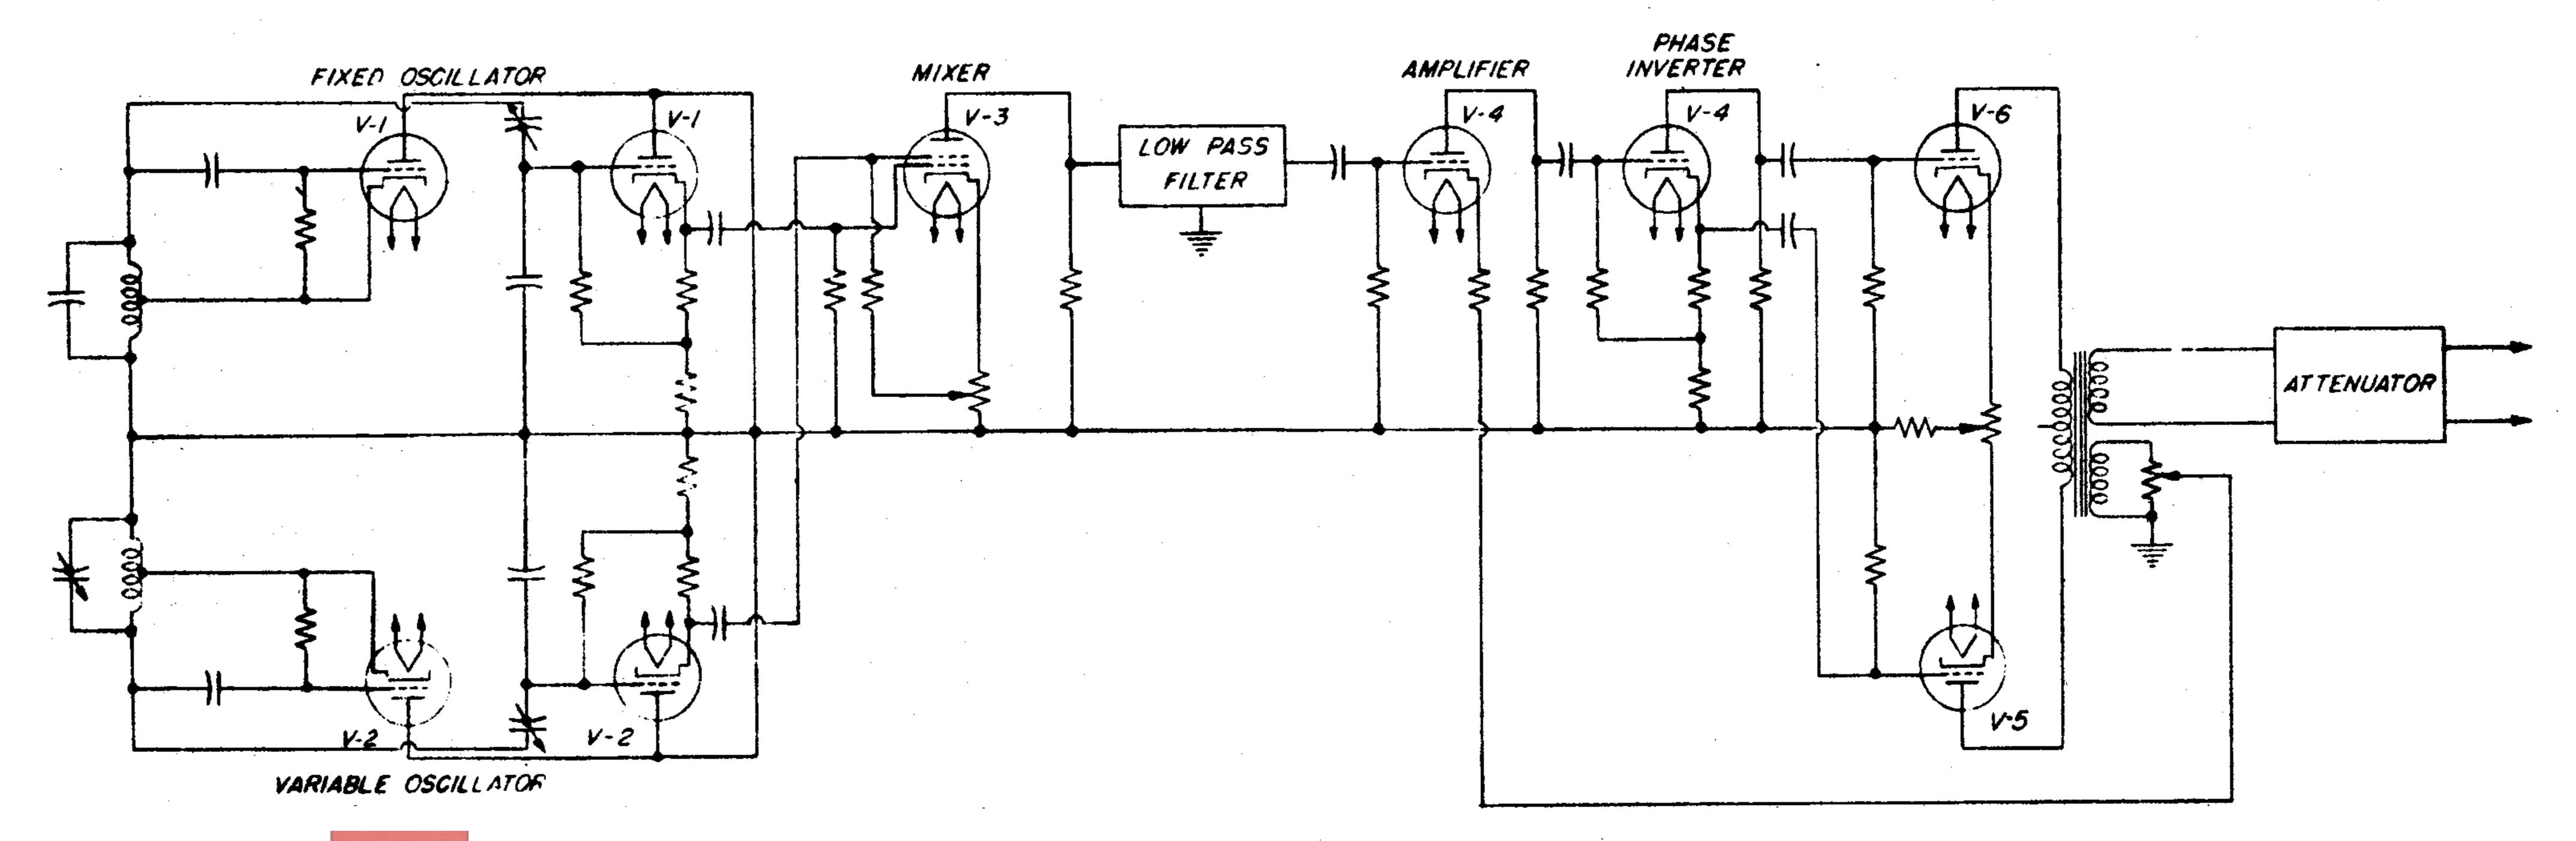


Figure 1. Schematic Diggrame Courtesy of GRWiki.orgBeat-Frequency Oscillator.