

TYPE 1201-B

UNIT REGULATED POWER SUPPLY

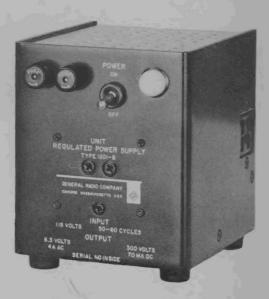


Figure 1. Panel View, Type 1201-B Unit Regulated Power Supply.

SPECIFICATIONS

Output: Dc, 300 volts $\pm 1\%$, regulated to 0.25%, 70 ma, max; ae, 6.3 volts, unregulated, 4 amp. 120-Cycle Ripple: Less than one millivolt.

Tube Complement: One each 12AX7, 6AV5GA, 5651, 12AT7, 6AN8.

Input: 105 to 125 volts, 50 to 60 cps, 90 watts. Threewire power cord is permanently attached. Can also be operated from a 400-cycle supply for applications where

a 400-cycle 6.3-volt supply can be tolerated.

Accessories Supplied: Output plug for connection to equipment other than Unit Instruments, spare fuses.

Mounting: Aluminum panel and cabinet

Dimensions: Width 5, height 53/4, depth 61/4 inches (130

by 150 by 160 mm).

Net Weight: 6 pounds (2.8 kg).

Form 1201-0110-E December, 1961



TYPE 1201-B


UNIT REGULATED POWER SUPPLY

INTRODUCTION.

- 1.1 PURPOSE. The Type 1201-B Unit Regulated Power Supply (Figure 1) is designed to provide a source of regulated power for other Unit Instruments. It can also supply instruments other than those of the Unit Line, by means of a mating connector provided.
- 1.2 DESCRIPTION. The dimensions and output voltage ratings of the Type 1201-B Unit Regulated Power Supply are identical to those of the Type 1203 Unit Power Supply. The Type 1201-B, which features increased current ratings, greatly reduced ripple voltage, and constant output voltage, is recommended in critical applications demanding maximum performance.

2 PRINCIPLES OF OPERATION. (See Figure 2.)

- 2.1 GENERAL. A full-wave voltage doubler with selenium rectifiers provides the input voltage for the series regulator. The output voltage, through a voltage divider, is compared to a reference tube (Type 5651) by means of a differential cascode amplifier. The amplified error voltage is applied to a series regulator tube, through a cathode follower, to provide constant output voltage.
- 2.2 FEEDBACK. In addition to the main feedback loop described above, two additional signal paths inside this feedback loop are provided for improved performance. A network comprising R533 and C531 reduces the effects of input fluctuations, and R540 is used to make the open loop gain infinite. This provides a very low output impedance and reduces the effect of load changes on output voltage.

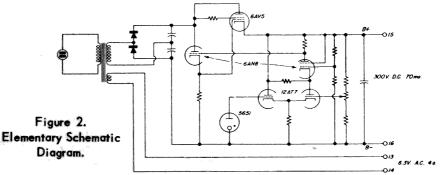

GENERAL RADIO COMPANY

- 3 INSTALLATION.
- 3.1 CONNECTIONS. Connect the Unit Regulated Power Supply to an a-c line (105-125 v, 50-60 cps).

NOTE

The Type 1201-B will operate satisfactorily from a 400-cycle line. For load currents above 50 ma, the minimum line voltage should be 107 volts.

If the Power Supply is to be used with a Unit Instrument, plug the Unit Instrument into the four-point connector on the right side of the Power Supply.

If the Power Supply is to be used with equipment other than Unit Instruments, use the mating connector provided. Terminal numbers are marked on the plug. Connect to terminals No. 13 and 14 for 6.3 volts ac, to terminals No. 15 and 16 for 300 volts dc. (The positive terminal is No. 15.)

Both the 6.3-volt a-c and 300-volt d-c supplies are isolated from ground and from each other, to give greater latitude in external connections.

- 4 CHECKS AND ADJUSTMENTS.
- 4.1 OUTPUT VOLTAGE ADJUSTMENT. A single adjustment, R551 (Figure 3), is provided to set output voltage to 300 volts ±1%. Readjustment of the potentiometer is usually unnecessary, except after replacement of V534 (Type 5651). Adjust so that an accurate voltmeter indicates 300 volts at the output terminals.
- 5 SERVICE AND MAINTENANCE.
- 5.1 GENERAL. The two-year warranty given with every General Radio instrument attests the quality of materials and workmanship in our products. When difficulties do occur, our service engineers will assist in any way pospossible.

In case of difficulties that cannot be eliminated by the use of these service instructions, please write or phone our Service Department, giving full information of the trouble and of steps taken to remedy it. Be sure to mention the serial and type numbers of the instrument.

Before returning an instrument to General Radio for service, please write to our Service Department or nearest district office (see back cover), requesting a Returned Material Tag. Use of this tag will ensure proper handling and identification. For instruments not covered by the warranty, a purchase order should be forwarded to avoid unnecessary delay.

5.2 FUSES. The Type 1201-B Unit Regulated Power Supply uses 0.8-amp fuses. When the Power Supply is used with Unit Instruments, full output power is not required, and input current is below 0.8 amp. However, if both output voltages are fully loaded and the Power Supply is run on a 125-volt

TYPE 1201-B UNIT REGULATED POWER SUPPLY


line, input current is just over 0.8 amp, and fuses may blow after several hours. Therefore, substitute 1-amp fuses for continuous operation at high line voltage and full load.

- 5.3 COVER REMOVAL. To remove the cover, loosen the black thumbscrew on the left side of the cabinet. Slide the cover off, away from the panel.
- 5.4 REMOVAL OF ETCHED BOARD. While it is possible to replace all tubes and measure all voltages without removal of the etched board, access to components requires swinging the etched board out of the instrument. Remove V531 (6AV5GA) and the two screws at the rear of the etched board (see Figure 3). The board will now swing out on the hinges provided. If V531 (6AV5GA) is replaced, the instrument may be operated in this position.
- 5.5 TROUBLE-SHOOTING PROCEDURE.
- 5.5.1 EXCESSIVE RIPPLE.
- 5.5.1.1 120-Cycle Ripple. Measure ripple at full load. If output ripple is excessive only at low line voltages, replace V531 (6AV5GA). If voltage across C1 and C2 is less than 400 volts at full load and 115-volt line, replace RX1 and RX2. If ripple across C1 and C2 is greater than 6 volts peak to peak (2 volts rms), replace C1 and C2.
- 5.5.1.2 60-Cycle Ripple. If 60-cycle ripple is excessive only at full load, one rectifier (RX1 or RX2) or one capacitor (C1 or C2) is probably faulty. If ripple is independent of load, it may be caused by heater-cathode leakage in V532 (6AN8) or V533 (12AT7). Measure d-c voltage from pin 4 or 5 of V533 (12AT7) with a vacuum-tube voltmeter. If this voltage is above 130 volts when the output voltage is 300 volts, V532 (6AN8) probably has excessive heater-cathode leakage. If this voltage is less than 110 volts when the output voltage is 300 volts, V533 (12AT7) probably has heater-cathode leakage. If this voltage is incorrect and tubes are good, check R536 and R549. Check C532.
- 5.5.2 INCORRECT OUTPUT VOLTAGE. If the output voltage is regulated and within a few volts of 300, reset R551 (refer to paragraph 4.1). If this adjustment drifts, replace V534 (5651).

If the output voltage drops only at low line and full load, replace V531 (6AV5GA) and check the voltage across C1 and C2. Voltage from the positive terminal of C2 to the negative terminal of C1 should be 405 volts with full load and 115-volt line. If this voltage is less than 400 volts, check RX1, RX2, C1, and C2.

If the output voltage is completely unregulated, replace V533 (12AT7) and V532 (6AN8). If tubes are not faulty, measure voltages at key points with a vacuum-tube voltmeter, comparing them with those given in Figure 4.

GENERAL RADIO COMPANY

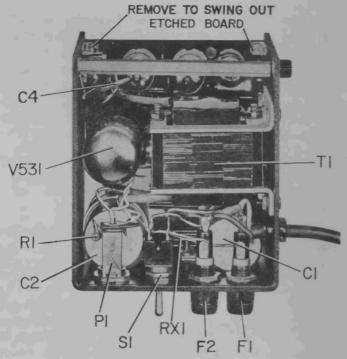

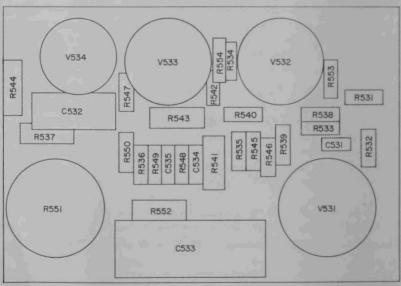


Figure 3. Interior View and Etched-Board Layout.

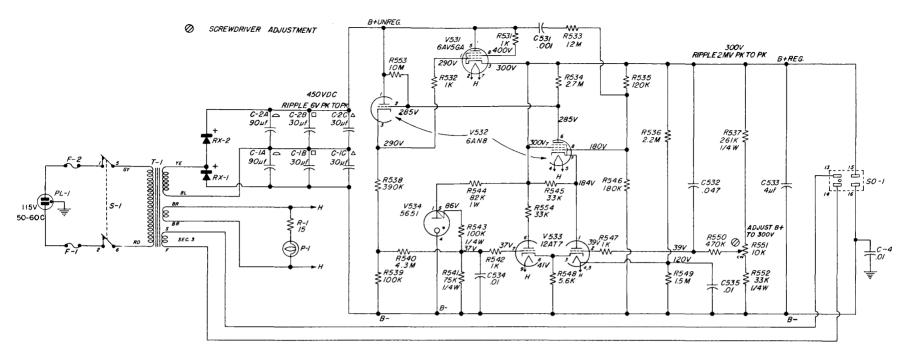


Figure 4. Wiring Diagram for Type 1201-B Unit Regulated Power Supply.

PARTS LIST

				PART NO. (NOTE A)						N.	PART NO. (NOTE A) REC-20BF	GF0.	0.001 ±20%	500 /	PART NO. (NOTE A) COC-60	NOTES:
RS (NOTE R)		15 1 1 12 2.7	± 10% ½w k ± 5% ½w k ± 5% ½w M ± 5% ½w M ± 5% ½w k ± 5% ½w	REC-20BF REC-20BF REC-20BF REC-20BF REC-20BF REC-20BF		R546 R547 R548 R549 R550 R551	180 1 5.6 1.5 470 10	k k M k	± 5% ± 5% ± 5% ± 5% ± 10%		REC-20BF REC-20BF REC-20BF REC-20BF POSW-3	C532 C533 C534	0.001 ±20% 0.047 ±10% 4 0.01 ±20% 0.01 ±20% FUSE, 0.8 amp SI	400 dcwv 450 dcwv 500 dcwv 500 dcwv	COW-25 COE-32 COC-62	(A) Type designations for resistors and capacitors are as follows: COC - Capacitor, ceramic COE - Capacitor, electrolytic COW - Capacitor, wax POSW - Potentiometer, wire-wound
	R536	2.2 261 390	M ± 5% ½w k ± 1% ¼w k ± 5% ½w	REC-20BF REF-65 REC-20BF		R552 R553 R554	33 10 33	k M k	-	1/4w 1/2w 1/2w	REC-20BF	F2 P1 RX1	FUSE, 0.8 amp Si LAMP, 6.3 v, Ma: RECTIFIER		FUF-1 2LAP-939 2RE-11	REC - Resistor, composition REF - Resistor, film
RESISTO	R539 R540	100 4.3 75	k ± 5% ½w M ± 5% ½w k ± 1% ¼w	REC-20BF REC-20BF REF-65	CAPACITORS (NOTE C)	C1A C1B C1C	90 30 30			300 dcwv	COE-52	RX2 S1 T1	SWITCH, dpst S TRANSFORMER 4	2RE-11 SWT-333, NP 485-495	wise indicated by k (kilohms) or M (megohms). (C) All capacitances are in microfarads.	
	R542 R543 R544 R545	1 100 82 .33	k ± 5% ½w k ± 1% ¼w k ± 5% 1 w k ± 5% ½w	REC-20BF REF-65 REC-30BF REC-20BF		C2A C2B C3C C4	90 30 30 0.01		+20%	300 dcwv		V531 V532 V533 V534	TUBE TUBE TUBE TUBE		6AV5GA 6AN8 12AT7 5651	When ordering replacement components, be sure to include complete description as well as Part Number. (Example: R85, 51 k ±10%, ½w, REC-20BF.)

OTHER GENERAL RADIO UNIT INSTRUMENTS

Type 1203 Unit Power Supply

Type 1205 Adjustable Regulated Power Supply

Type 1206 Unit Amplifier

Type 1208 Unit Oscillator (65 - 500 Mc)

Type 1209-B Unit Oscillator (250-920 Mc)

Type 1209-BL Unit Oscillator (180-600 Mc)

Type 1210 Unit R-C Oscillator (20c-0.5 Mc)

Type 1211 Unit Oscillator (0.5-50 Mc)

Type 12i2 Unit Null Detector

Type 1213 Unit Time/Frequency Calibrator

Type 1214 Unit Oscillator (400 and 1000 cycles)

Type 1215 Unit Oscillator (50-250 Mc)

Type 1216 Unit I-F Amplifier

Type 1217 Unit Pulser

Type 1218 Unit Oscillator (900-2000 Mc)

Type 1219 Unit Pulse Amplifier

Type 1220 Unit Klystron Oscillator

GENERAL RADIO COMPANY

WEST CONCORD, MASSACHUSETTS

EMerson 9-4400

CLearwater 9-8900

DISTRICT OFFICES

NEW YORK

Broad Ave. at Linden, Ridgefield, N. J. Telephone N.Y. WOrth 4-2722 N.J. WHitney 3-3140

PHILADELPHIA

1150 York Rd., Abington, Penna. Telephone HAncock 4-7419

WASHINGTON

8055 13th St., Silver Spring, Md. Telephone JUniper 5-1088

CHICAGO

6605 West North Ave., Oak Park, III. Telephone VIIIage 8-9400

LOS ANGELES

1000 N. Seward St., Los Angeles 38, Calif.

Telephone HOllywood 9-6201

SAN FRANCISCO

1186 Los Altos Ave., Los Altos, Calif. Telephone WHitecliff 8-8233

CANADA

99 Floral Pkwy., Toronto 15, Ont. Telephone CHerry 6-2171

REPAIR SERVICES

EAST COAST

General Radio Company
Service Department
22 Baker Ave., W. Concord, Mass.

Telephone EMerson 9-4400

General Radio Company

NEW YORK

Service Department

Broad Ave. at Linden, Ridgefield, N. J.

Telephone N.Y. WOrth 4-2722

N.J. WHitney 3-3140

MIDWEST

Service Department 6605 West North Ave., Oak Park, Ill.

Telephone VIIIage 8-9400

General Radio Company

WEST COAST

General Radio Company
Service Department
1000 N. Seward St., Los Angeles 38, Calif.
Telephone HOllywood 9-6201

CANADA

Bayly Engineering, Ltd.

First Street, Ajax, Ontario

Telephone Toronto EMpire 2-3741

Printed in USA